

## Remote Control DIP Switch Settings

SETTING SWITCH STATUS				DEFINITION	
SW. NO. 1	SW. NO. 2	SW. NO. 3	SW. NO. 4	RC3	RC4
OFF	OFF	--	--	RC-ALL MODES OF OPERATION	
ON	OFF	--	--	STD-COOL, FAN, DRY, ACTIVE	
OFF	ON	--	--	HEAT-COOL, FAN, DRY, ACTIVE	
ON	ON	--	--	AUTO FAN (AF)	
--	--	OFF	--	TEMP. DISPLAY IN °C DEGREES	VERTICAL SWING ONLY
--	--	ON	--	TEMP. DISPLAY IN °F DEGREES	HORIZONTAL & VERTICAL SWING FUNCTIONS TOGETHER
--	--	--	OFF	TIMER & CLOCK 12H AM, PM	DISABLE LCD & KEY ILLUMINATION
--	--	--	ON	TIMER & CLOCK 24H	ENABLE LCD & KEY ILLUMINATION

Reset operation - Press the 4 buttons simultaneously: "CLEAR ", "SET", "HR +", "HR -" for 5 seconds

### LEGEND

**SW1, SW2** - Selection of RC/ST

**SW3** – Selection of Display °C or °F in RC3 or swing function in RC4

**SW4** – Selection of Time Display 12H AM/PM or 24H in RC3 or illumination in RC4

OFF = 0

ON = 1

### NOTE

After setting the DIP switches perform reset operation.

